

REEL EZ TRAILERS

EZ35 & EZ35-IR Assembly Instructions


Step 1

Remove all parts from pallet




Step 2

Install trailer pivot arm (#5) as shown in diagram below. A rubber mallet can be used to assist. Install #6 and #7 and torque to 50 ft. lbs. **DO NOT TIGHTEN THE ARM. IT MUST MOVE FREELY.**

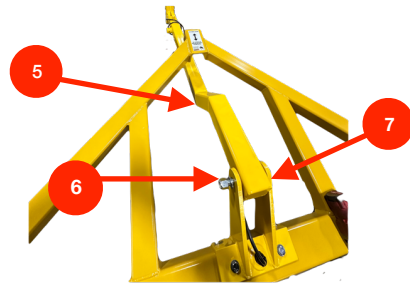

Step 3

Raise the trailer pivot arm to lock in place installing pin and clip. (Part# 8)

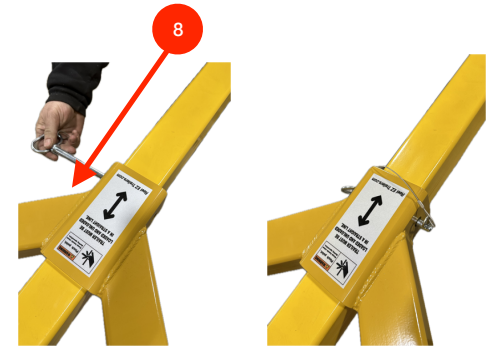


Step 4

Team Lift - With more than one person, lower Trailer to the ground. Remove all packing Brackets from pallet and remove pallet.



Step 5

Remove Rotors. Flip them over and install. *See fender kit instructions if fenders are present*
Install wheels: Tighten in star pattern to 75 ft lbs.

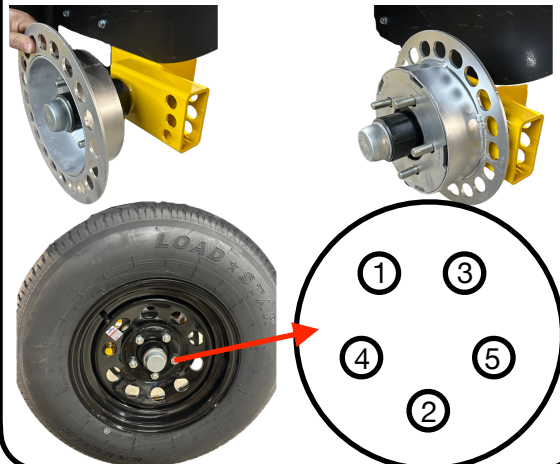

Step 6

Install safety chains (#14) using bottom holes (#9) on the lunette bracket.

Notes: When hooking chains to vehicle, always cross them. Make sure vehicle is straight when loading & unloading trailer.

